


PSD PISTOL STORAGE DEVICE

INSTRUCTIONS

100% MADE  IN THE U.S.A.

You must read, understand, and follow all of the above safety and other instructions above before proceeding. Before installation make sure the firearm is unloaded and the chamber is empty, failure to do so could result in death or serious bodily injury.

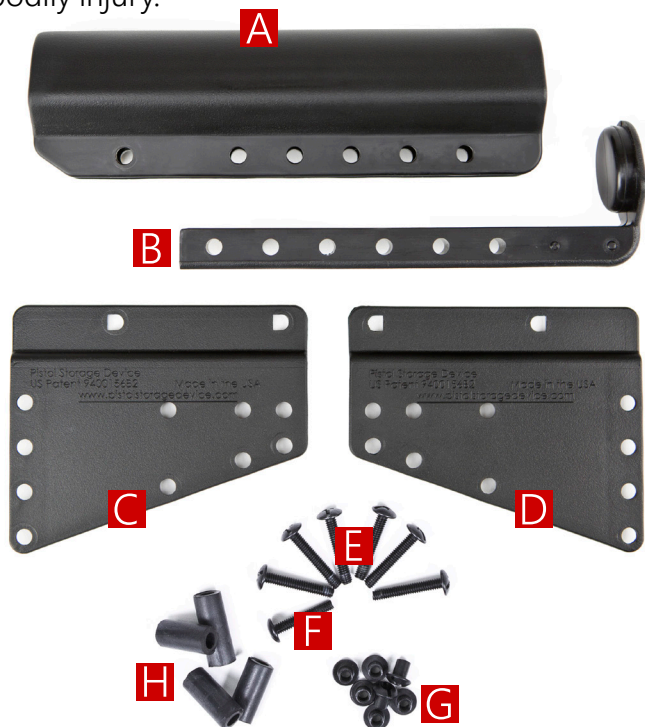

- A** Buffer Cover
- B** Buffer spacer
- C** Right wing
- D** Left wing
- E** 1" screws for wing mounting
- F** 3/4" screw for forward cover/spacer mounting
- G** 1/4" slotted female treaded post-backs
- H** 4" rubber tubing




TOOLS NEEDED:

- A.** Slotted screwdriver
- B.** Phillips screwdriver
- C.** Knife or shears to cut rubber tubing

*If using a power driver to assemble, secure post-backs with slotted screwdriver. Failure to do so can result in injury

ASSEMBLY:

1. Install buffer tube cover **(A)** over the existing buffer tube ensuring the slight angle of the cover is to the front
2. Install buffer spacer **(B)** inside the buffer tube cover.
- *Please note that with the various sizes of buffer tubes in production this part may be omitted or trimmed to fit tubes smaller than 1.2".
3. Cut rubber tubing into approximate 1" lengths, measure twice and cut once!
4. Using the provided 1" screws and post-backs, apply a small amount of thread locker to each screw and mount the wings parallel to the buffer cover/spacer assembly.

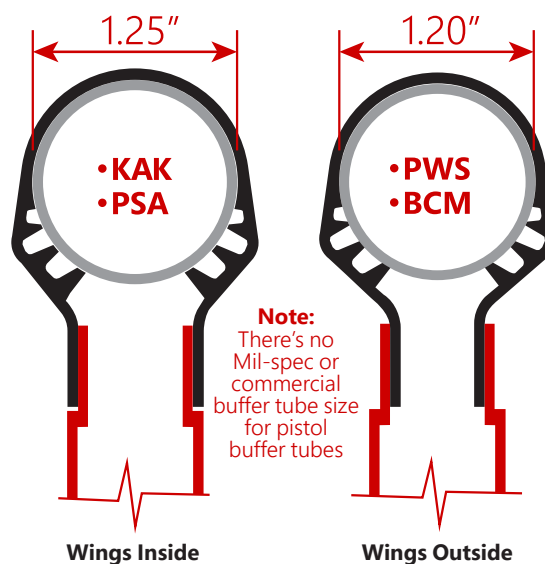

5. Install rubber tubing over the screws between the wings as needed, note .308 and AK mags fit better with no tubing over the front mounting screw.

6. Fit the magazine into the Pistol Storage Device and adjust the tension as necessary by tightening or loosening the hardware on the wings until desired retention level is attained.